



USB KEYBOARD CONTROL

You can control your Cortex player from any wireless or corded USB Keyboard.

Just plug in a USB keyboard into any of your cortex players USB jacks and you can String Search for songs by using the keyboard to input directly into the player .

You can also control many of the functions of your player from the keyboard.

Below is a list key names and thier corresponding functions.

KEYBOARD	CORRESPONDING FUNCTION / KEY ON PLAYER
TAB	Switch active side the keyboard is controlling (no affect on single units)
ENTER	Enter
Arrows	MF Navigator keypad
+	Pitch bend +
-	Pitch bend -
Shift	Shift
CTRL-S	Search Mode
CTRL-P	Play Mode
CTRL-C	Cue
CTRL-Space	Play/Pause
CTRL-J	Jog Mode
CTRL-I	Info
CTRL-T	Time
CTRL-1	Single
CTRL-D	Device Menu